

YUME 和





Join the Shampoo Service Revolution

Exceptional comfort from all your shampoo services


The shampoo service is a key part of any salon's menu of services and impacts every other procedure offered.

And since comfort is everything for customers today, improving this aspect of the shampoo service in line with their feedback gives customers a better impression of the salon and opens up new business possibilities.

The salon business is changing, and it all starts with the shampoo service.

Recliner Style

Takara Belmont's new recliner style delivers both comfort and efficiency

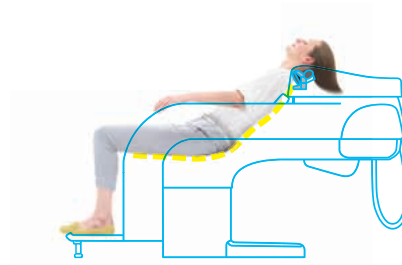

Now customers can experience the first-class comfort of lying back in a chair that gently envelops the body. The YUME Nagomi also features a space-saving footprint that ensures an easy fit in salons of all sizes and a stylist-friendly design that facilitates the shampoo process. The result is a new concept in shampoo service that will delight customers and salons alike.



Deliver head massage service with ease

Designed to help customers relax during shampooing and rinsing, Takara Belmont shampoo units can accommodate an extensive selection of head massage services and other related services—for a unique level of comfort.





Sophisticated Design




Minimalist, comfort-oriented design is shaped to fit any space, any style

The YUME Nagomi is distinguished by its sleek horizontal lines. Despite its compact size, this shampoo unit boasts an open form that invites customers to relax. With a look that conveys stylish versatility, the simple, refined design complements any salon interior while offering comfort as only YUME Nagomi can.

Replace your back-wash shampoo unit without taking up additional space

At about 2,500 mm*, the YUME Nagomi's footprint is the same as that of other Takara Belmont back-wash shampoo units. Switching to a YUME Nagomi for your back-wash setup enhances comfort while allowing you to expand your menu of services to include, for example, a relaxing head massage.

*Includes work space


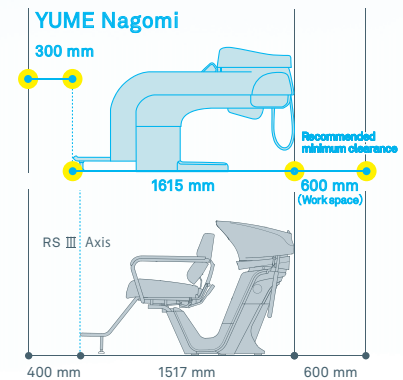




Mechanism

Built-In Comfort


Webbing technology in the seat cushioning gives customers wrap-around comfort for that just-like-you're-sleeping feeling. And a new neck device—specially developed for YUME Nagomi—ensures proper neck and head support for minimal strain and exceptional comfort.

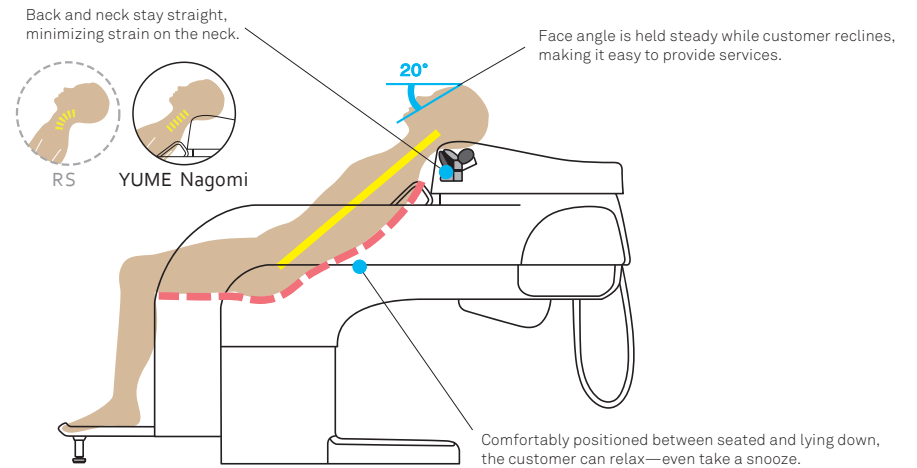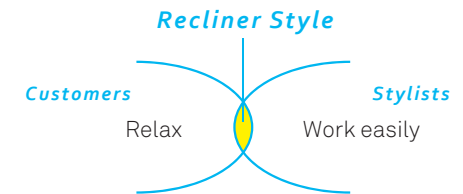






Webbing technology provides comfortable seating for all

By employing seat cushions that use webbing technology to fit themselves to a customer's body, the YUME Nagomi can comfortably accommodate customers of all sizes. The YUME Nagomi gives every customer just the right amount of support needed to lie back smoothly and comfortably into the shampoo position.

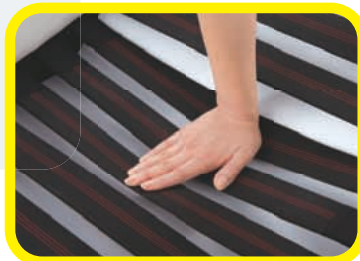


A series of independent belts supports the seat cushioning. Each belt takes in and disperses the body weight being applied to different parts of the chair at varying angles, giving customers superb seating comfort.

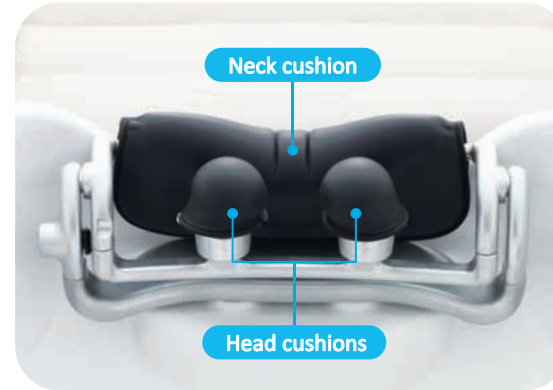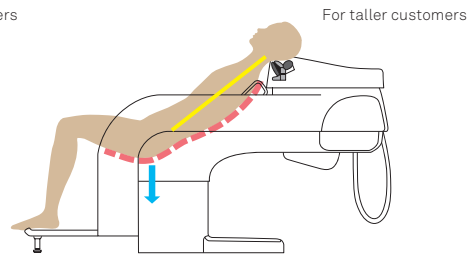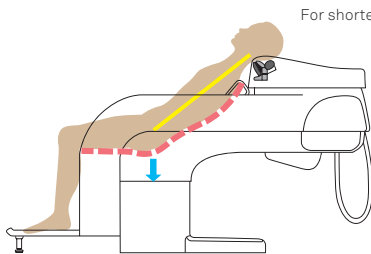

YUME Nagomi neck device offers ultimate comfort

Designed specifically for use with the recliner style, this neck device supports a customer's neck and head at three points with gel cushions, reducing neck strain and ensuring a truly comfortable shampoo experience.

[Mechanism]

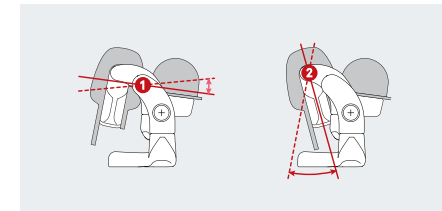

A two-axis rotational structure on the neck device allows the head and neck cushions to adjust to the contours of a customer's head.

Functions

Specifications Ensure



Easy-to-use bowl design

The shower head is located at the back of the bowl, making it easy to shampoo customers from any position. There's also a thermostat tap on the right side of the bowl for adjusting the temperature of the water and a water flow tap on the left side.

Adjustable shower head for efficient shampooing


The shower head offers one-touch switching between a gentle low-splash foaming mode and a high-pressure shower mode.



Work Efficiency and Overall User Friendliness

Shampooing is easy—even on customers wearing perm rods

When in use, the neck cushion rotates towards the back of the bowl and locks in place. Removing the head cushions creates more space for customers wearing perm rods and makes for easy shampooing.

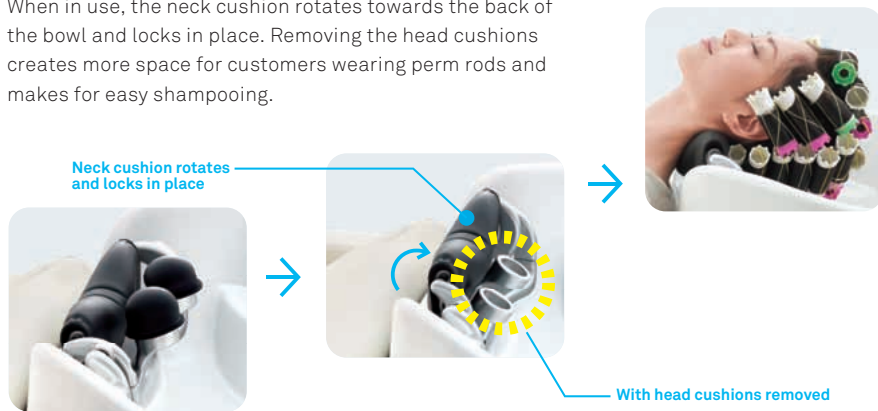

Drain cap opens and closes with an easy turn

With just a quick turn of the shampoo bowl's newly designed drain cap, water can be easily saved or drained. The new design also allows water to drain more quietly than previously possible.

Note: Drain cap should be removed from bowl when not in use for a long period of time.



Foot control switch enables quick seat adjustments

With the foot control switch, the recline of the chair can be quickly adjusted to the most suitable position, while the customer's head stays fully supported.



Footstep assists customers who might need it

For customers under 158 centimeters tall, this slide-out footstep can make it easier to get in and out of the chair smoothly and to sit comfortably.



Variations [YUME Nagomi Prestige]

Choice of colors





* A back support cushion of the same color comes with the chair.



Choice of standing or seated position

Stylists can choose to deliver customer services from a standing position (distance from floor to head of customer: 900 mm) or a seated position (distance from floor to head of customer: 830 mm).

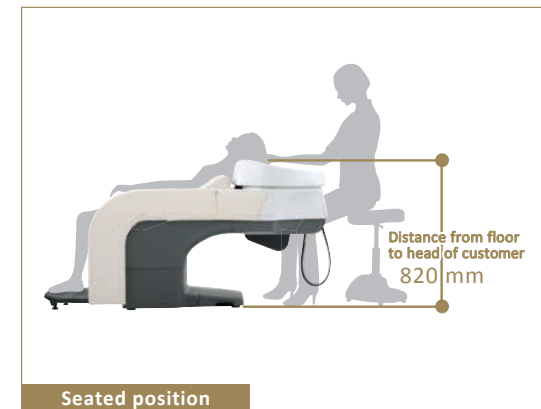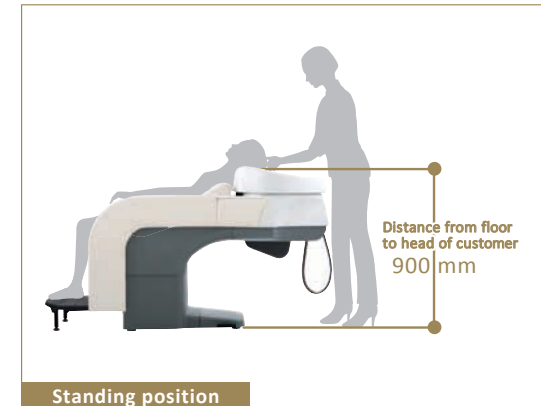

Options

Replacement piping cover & kits

EA-YMIXIPC (Replacement piping cover)
EA-YMIXIPKH (Replacement piping kit H)
EA-YMIXIPKL (Replacement piping kit L)

Use of the replacement kits with a YUME Nagomi does not require any changes to the riser piping position used for Takara Belmont's RS and NRS back-wash shampoo units. The selected kit should be used in combination with the replacement piping cover.



*Select replacement piping kit H for the standing position and replacement piping kit L for the seated position.

Vinyl cover for backrest

EA-YMIXIVCB



Floor sheet for footstep

EA-YMIXIFS

This handy floor sheet reduces floor friction, allows the footstep to be pulled out smoothly, and protects the flooring.



ESPOIR stool

EX-ESST

Size: W360 × D390 × H474~680 mm

Simple, functional, and significantly lighter than the YUME stool, the ESPOIR stool is height adjustable and features a seat that moves with the stylist's body even when the stool itself is in a fixed position, allowing shampoo services to be delivered in comfort.



Height adjustment range:
206 mm



Maximum swing angle:
about 8° forward from
the vertical position

YUME wagon

SR-ES WD (Wood)
SR-ES WH (White)

W380 × D440 × H835 mm



Wood

White




Specifications


Outline drawing (unit:mm inch)

H: When operated from standing position
L: When operated from seated position

Overhead view

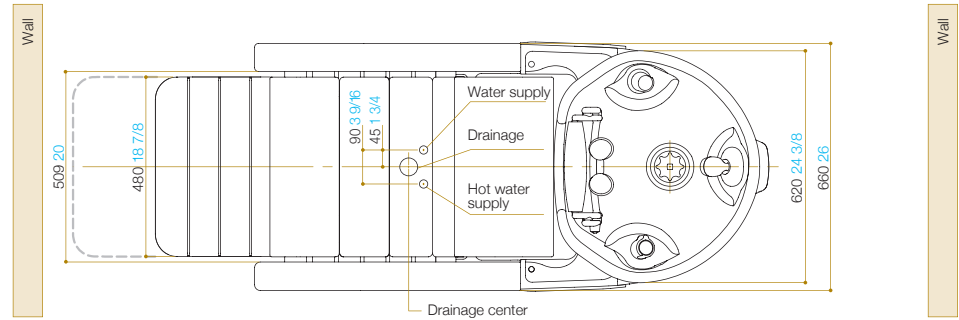

Side view

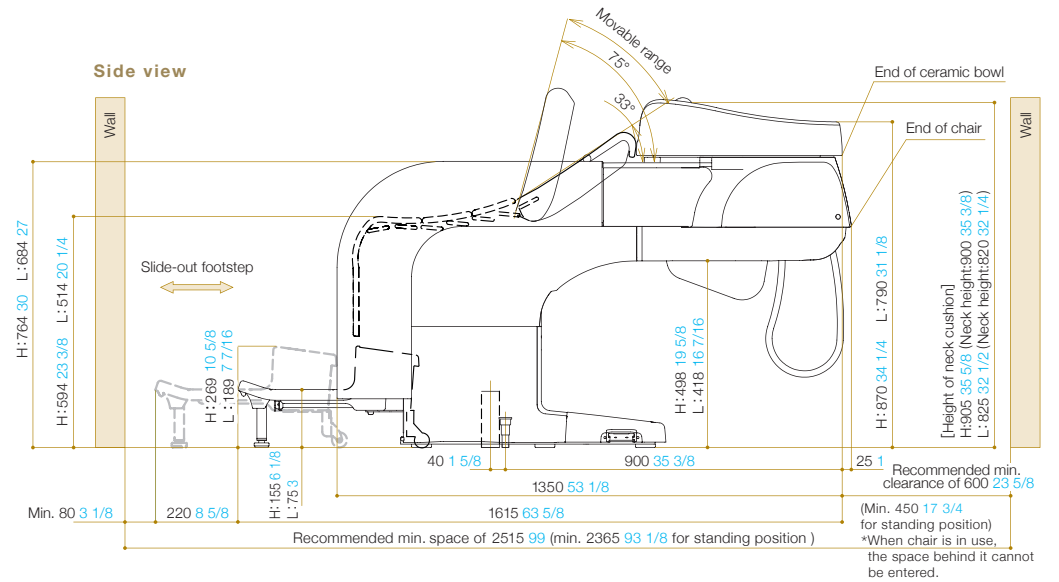


*Figures shown above are for seating a customer about 170 cm in height. When attending a taller customer, please allow sufficient leeway. Bowl and seat dimensions may vary from product to product.

[Piping diagram] (unit:mm inch)

○ Indicates parts of chair that contact the floor

H: When operated from standing position
L: When operated from seated position

Water supply (13 mm 1/2)	
H height	140 5 1/2
L height	60 2 3/8
Drainage (VU40/VP40)	
H height	240 9 7/16
L height	160 6 1/4
Hot water supply (13 mm 1/2)	
H height	140 5 1/2
L height	60 2 3/8

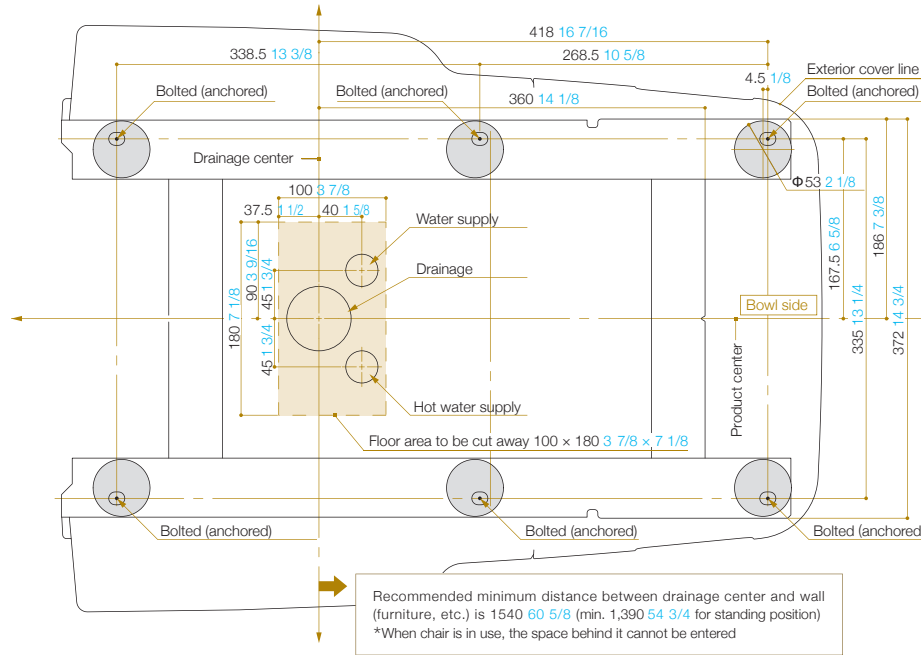

Recommended minimum distance between product center and wall (furniture, etc.) is 830 32 5/8 (applicable when passage is 500 19 5/8 wide)

CAUTION
DO NOT install riser piping where bolts or anchors are used for fastening

Specifications

	For use in standing position	For use in seated position
External dimensions (W × D × H) (mm inch)	660 × 1640-1860 × 930 26 × 64 5/8-73 1/4 × 36 5/8	660 × 1640-1860 × 850 26 × 64 5/8-73 1/4 × 33 7/16
Weight	102 kg	
Mixing method	Thermostat system	

Model code

Bowl	Seat
AY-YMIXIH (For use in standing position)	AY-YMIXIGL1 (White)
	AY-YMIXIGL2 (Black)
AY-YMIXIL (For use in seated position)	AY-YMIXIGL3 (Dark brown)
	AY-YMIXIGL4 (Maroon)

TAKARA BELMONT GROUP

- JAPAN** TAKARA BELMONT CORPORATION, OSAKA HEADQUARTERS Tel: +81-6-6212-3523 E-mail: beauty@takara-net.com Web: www.takarabelmont.co.jp
- U.S.A.** TAKARA BELMONT USA, INC. Tel: +1-732-469-5000 E-mail: webmaster@takarabelmont.com Web: www.takarabelmont.com
- CANADA** TAKARA COMPANY, CANADA, LTD. Tel: +1-905-822-2755 E-mail: tomtraves@takarabelmont.ca Web: www.takarabelmont.ca
- BRAZIL** TAKARA BELMONT PARA AMERICA DO SUL INDUSTRIA E COMERCIO DE MOVEIS LTDA. Tel: +55 11 3147-4040 E-mail: takbel@takarabelmont.com.br
- U.K.** TAKARA BELMONT (UK) LTD. Tel: +44-20-7515-0333 E-mail: hairdressing@takara.co.uk Web: www.takara.co.uk
- GERMANY** TAKARA BELMONT FRANKFURT OFFICE Tel: +49-69-2972-8090 E-mail: info@takara-belmont.de Web: www.takara.co.uk
- KOREA** TAKARA BELMONT (KOREA) CORPORATION Tel: +82-2-413-5977 E-mail: info@takarabelmont.co.kr Web: www.takarabelmont.co.kr
- TAIWAN** TAKARA BELMONT (TAIWAN) CORPORATION Tel: +886-2-8789-0809 E-mail: takara.twn@msa.hinet.net
- CHINA** TAKARA BELMONT (SHANGHAI) CORPORATION Tel: +86-21-6272-8166

- Actual color may differ from color in printed catalog.
- The manufacturer reserves the right to change models, descriptions, and specifications without prior notice.